



SportsPlay

32 Gallon Steel Trash Can

For Part Numbers: 601-708 and 601-709




Component Details

Item No.	Part Number	Description	QTY
1	*613-901P	32 G. Trash can half Perforated	2
	*613-901E	32 G. Trash can half Perforated	2
2	604-802	32 Gallon Bottom	1
3	126-702	3/8 x 3/4" Button Head Bolt	6
4	126-703	3/8 x 1" Button Head Bolt	4
5	316-601	3/8" Washer	20
6	226-602	3/8" Lock Nut	10
7	416-505	7/32" Socket Key	1

Optional Accessories

	601-723	32 Gallon Liner	1
	601-715	32 Gallon Dome Lid	1
	601-719	32 Gallon Rain Bonnet	1
	601-717	32 Gallon Ash Top	1
	601-721	32 Gallon Steel Lid	1

***Verify whether your trashcan is either perforated or expanded for correct component identification.**

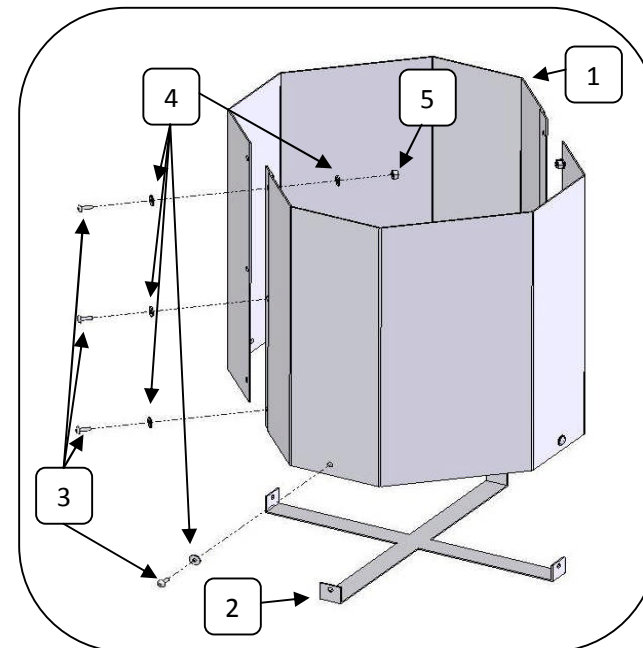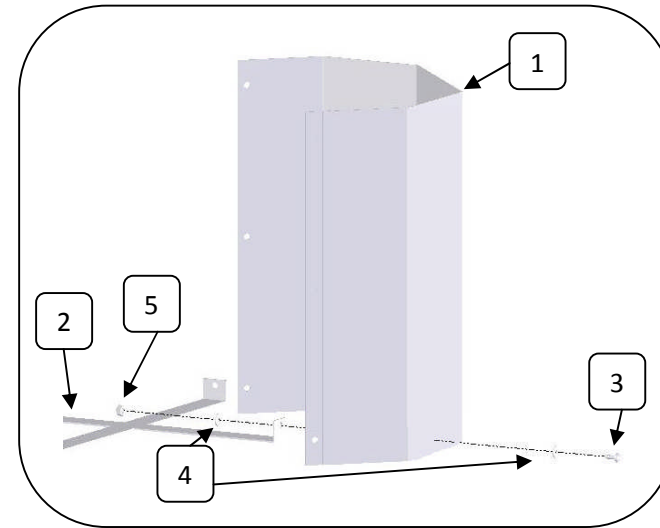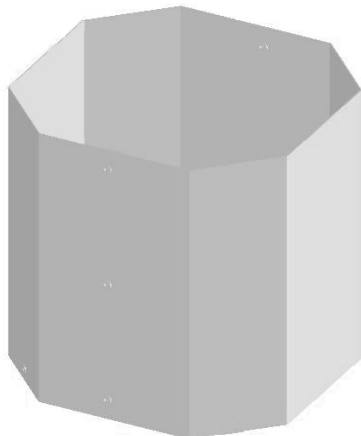



SportsPlay

32 Gallon Steel Trash Can

For Part Numbers: 601-708 and
601-709

Important

- Please keep a copy of these instructions in your files. There is important replacement part information in them that will assist you in the event a part is ever needed.

Assembly Information

- Read all assembly instruction before starting assembly.
- Verify that all parts were received by comparing the parts received to the component list on page one.
- If your product mounts to something (surface mount, in ground or wall mount) you will assemble the entire product before drilling holes or mounting frame in order to ensure proper layout.
- CONTACT YOUR DISTRIBUTOR ABOUT ANY PARTS YOU ARE MISSING. You must report missing parts within 10 days of delivery.
- Hand-tighten all bolts during the initial assembly (unless specifically told to tighten completely in the instructions). Once the unit is fully assembled and square you should completely tighten them.
- Other than when a specific step in the assembly instructions specifies "to not apply Loctite, we recommend applying a small amount to all assembly bolts.

General Maintenance

- It is recommended that you inspect the product monthly for loose bolts and broken parts. If replacement parts are needed please refer to these instructions for part numbers and descriptions then call your distributor to order replacements.

Notes

- Do not tighten bolts until the unit has been completely assembled.
- Refer to the two explosion drawings on page 1 for a visual reference during assembly.

Assembly Instructions

1. Connect one of the trash can halves (1) to the bottom (2) using 3/8 x 1" bolts (4), 3/8" washer (5) and 3/8" lock nuts (6).
2. Connect the other trash can half to the bottom following the procedures from step 1.
3. Connect the two halves using 3/8" x 3/4" button head bolts (3), 3/8" washers (5) and 3/8" lock nuts (6).
4. Tighten all bolts.