

Electronic Guitar

Instruction Manual

Model #: DRMG

Ages
3+



Do-Re-ME!™ Electronic Guitar

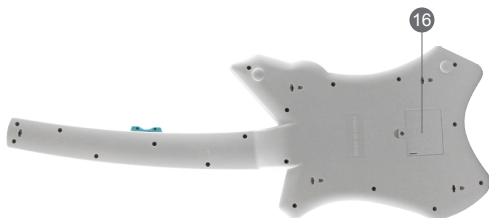
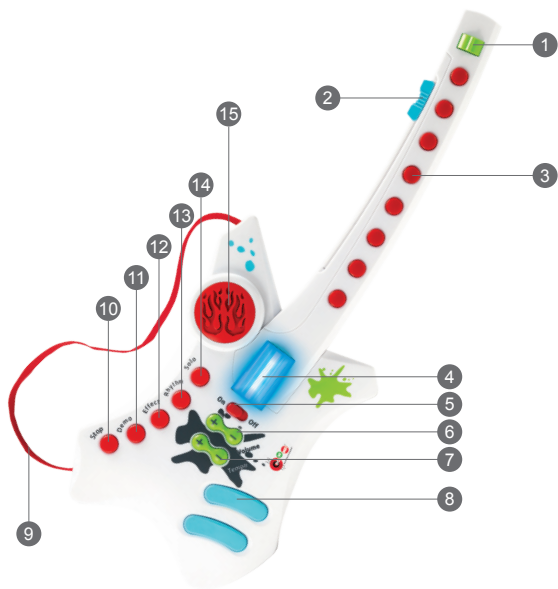


Diagram:

1. Pitch Roller
2. Sliding Bar
3. Chord Buttons
4. Strum Roller
5. On/Off Switch
6. Volume Control Buttons
7. Tempo Control Buttons
8. Dual Sound Pads
9. Adjustable Shoulder Strap
10. Stop Button
11. Demo Song Button
12. Sound Effects Button
13. Rhythm Button
14. Solo Style Button
15. Speaker
16. Battery Compartment

How to Play The Do-Re-ME!™ Electronic Guitar

To Start: Switch the On/Off to On and the guitar is ready to play. To turn off the unit, switch to Off.

Strum Roller: Push up or down on the strum roller to play different chords.

Volume Control Buttons: Press the “+” or “-” button to adjust the volume.

Tempo Control Buttons: Press the “+” or “-” button to adjust the tempo.

Solo Style Button: Press the button to change different styles of solo performance sound. Press the button to change style of solo for distortion or wah-wah effects.

Rhythm Button: Press the button to select different rhythms.

Effect Button: Press the button to select 4 different sound effects that will change the sound of the Dual Sound Pads.

Dual Sound Pads: Press the pad to play different long and short sound effects.

Demo Song Button: Press the demo song button to play 4 different demo songs. During the demo, all other functions will not be active except for the volume and tempo controls.

Stop Button: Press the stop button to stop all functions immediately.

Sliding Bar: Slide the bar along the neck of the guitar for different sound distortions.

Pitch Roller: Push up or down to adjust the pitch.

Sleep Mode: When the unit is inactive for approximately 5 minutes, it will go into sleep mode to save battery power.

Battery Installation:

- Make sure the Electronic Guitar is switched Off.
- Use a screwdriver to open the battery cover located at the bottom of the speaker module.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are recommended.
- Replace and secure the battery cover.

Battery Notice:

- The use of rechargeable batteries is not recommended.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries (if applicable).
- Batteries are to be inserted according to the correct polarity (+ and -). Incorrect insertion can damage the unit, cause fire or cause the batteries to explode.
- Batteries should be removed if the unit will not be used for an extended period of time.

Care and Maintenance:

- Keep the unit clean by wiping it with a dry cloth, or use non-alcohol solutions. We recommend HygenX™ Universal Cleaner - chemical-free, alcohol-free, ammonia-free cleaner. Safe for kids and the environment.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Low battery may cause the unit to operate improperly or may weaken the sound performance. If this occurs, replace with a new set of batteries.

Disposal:

If ever discarding this unit, please follow your local recycling regulations.

Please keep all information for future reference.

Product Registration Instructions



Visit: www.HamiltonBuhl.com

1. Click on Customer Care
2. Click on Product Registration Form
3. Please fill out all fields marked with * to register your product

Warranty:

Warranty begins the date item ships from our warehouse. All products have a one year warranty from original date of shipment, unless otherwise noted.



80 Little Falls Road
Fairfield, NJ 07004
1-800-631-0868
www.HamiltonBuhl.com