

Roam Mobile Whiteboard / RM36SAWHN


Instruction Sheet

NOTE: Immediately after delivery, carefully open carton(s) and inspect for concealed damage. Save carton(s) and packing materials for future use. If concealed damage is found, notify the carrier immediately to request an inspection. Failure to report shipping damage in a timely manner will result in the denial of a damage claim. Return the product to the original packaging to protect it.


NOTE: Failure to follow the installation instructions will void warranty.

NOTE: (2) technicians are recommended.


Included:

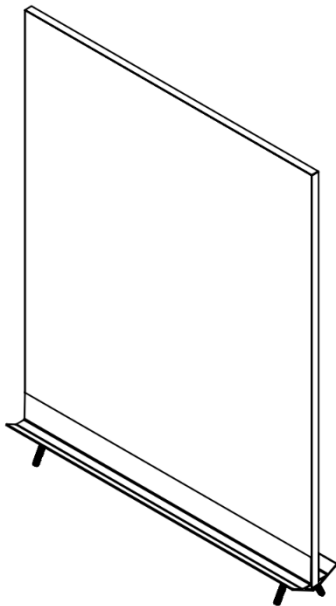


(1) Board Assembly

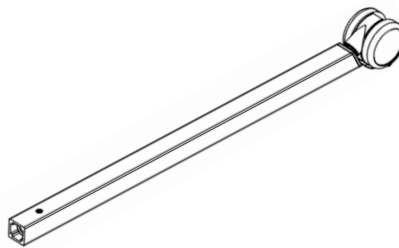


(4) Legs

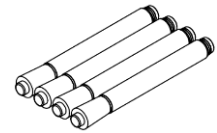

(4) Dry Erase Markers

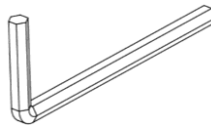


(1) 3/16" Allen Wrench

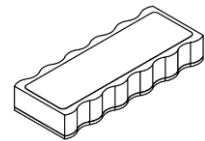


(1) Eraser


Step 1: Place the board assembly onto a protective surface such as carpet as shown. Insert leg onto exposed stud, aligning the leg's set screw with the flat on the stud.

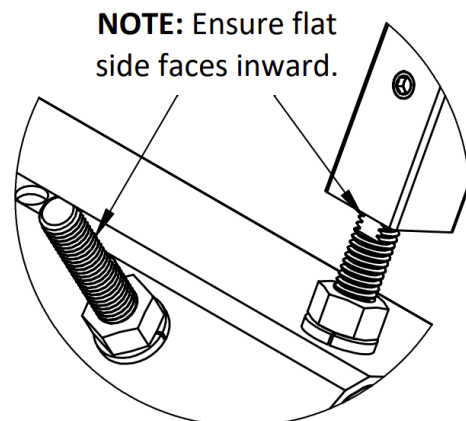

Step 2: While holding the leg perpendicular to the angled surface, use the wrench to tighten the set screw. Repeat for remaining legs.

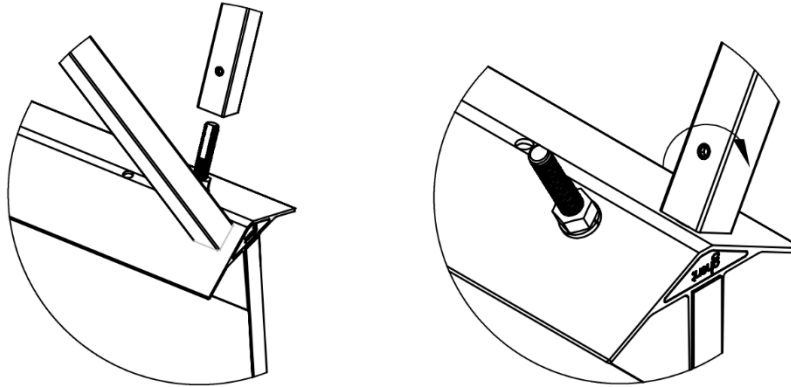

Step 3: Stand the Roam Mobile upright; confirm correct leg orientation.

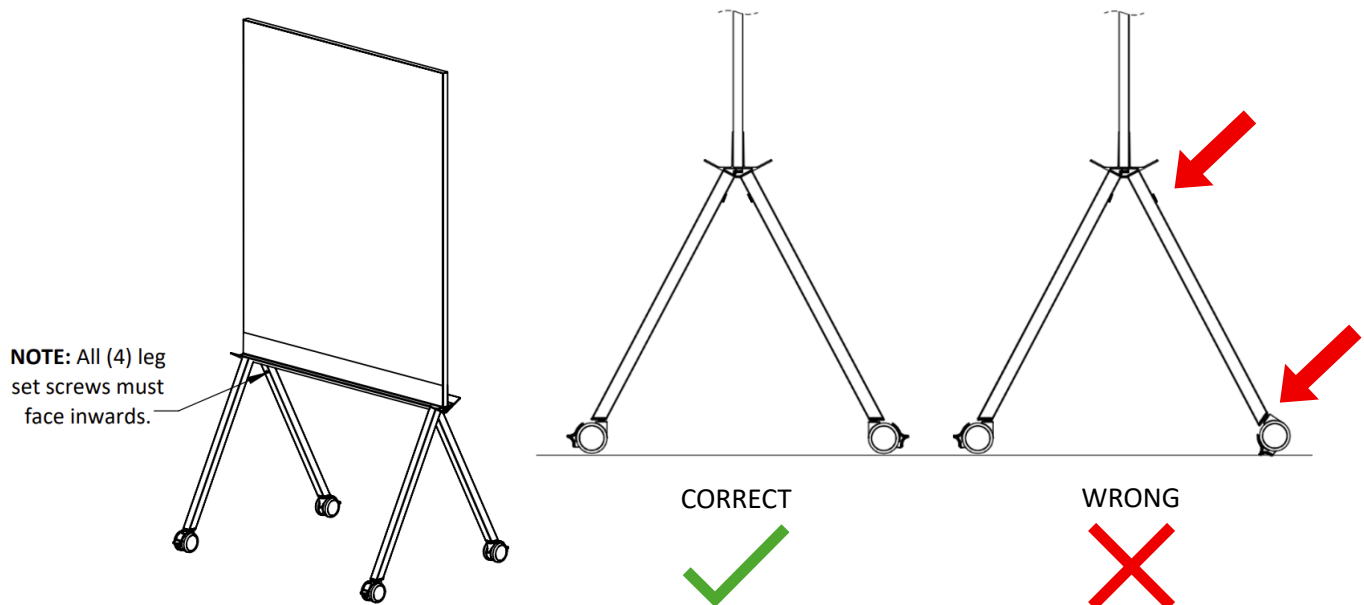

Step 4: Recycle all packaging in accordance with local regulations.