

Harmony Premium Glass Markerboards



Mounting Instructions

For the most secure mounting, the board should be attached directly into wall studs. Ghent has supplied self-tapping screws for mounting into wooded wall studs and toggle anchors when wall studs cannot be used.

We also recommend at least three people install the board.

Install the board with the frosted/painted side facing the wall.

- 1.) Place the board up against the wall, at the desired height, and level the board. Using the holes in the board as a template, mark the drilling locations on the wall. Set the board aside.
 - 2.) Insert a self-tapping screw, or toggle anchor, into each stand-off.
 - 3.) Drill 3/32" (2MM) holes for the self-tapping screws, or 7/16" (11MM) holes for the toggle anchors at the marked locations on the wall.
 - 4.) Attached the stand-offs to the wall via the self-tapping screw, or toggle anchors.
 - 5.) Clean both sides of the board.
 - 6.) Install the stand-off caps and the plastic washers into the board as shown.
 - 7.) Place the marker/eraser holder over the bottom right hand stand-off.
 - 8.) Lift the board and align the stand-off caps with the mounted stand-offs. Swing the marker/eraser holder up into the position shown and firmly screw the caps into the stand-offs.
 - 9.) Complete the assembly by loading the markers and eraser into the marker/eraser holder as shown.
- (Note: Not all Harmony Premium Glass boards come with the pictured hardware).*

