


# Round Base Table Installation

CORTECH

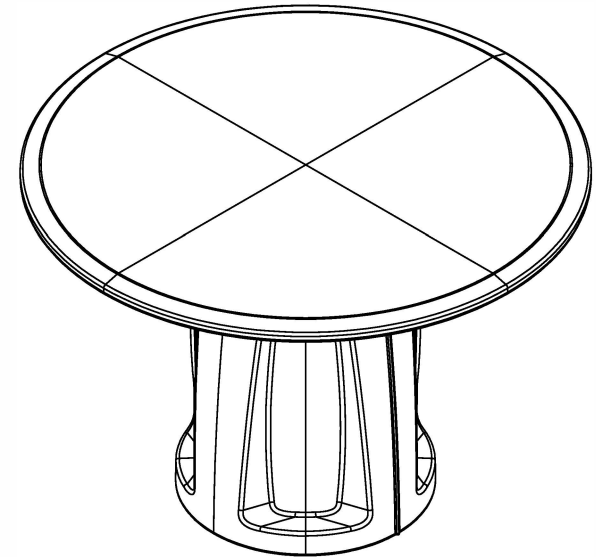

## You will need:

### Not Included:



**1x**

Pencil  
For Marking Floor



**1x**

Drill  
With 3/8" Masonry Bit




**1x**

Screwdriver  
With Tamper Resistant Torx Bit



**4x**


3/8" - 16 x 4"  
Tamper Resistant Torx Screw



**4x**

3/8" Flat Washer  
.406" ID .875" OD

### Included:



**4x**

5/16" Washer  
.344" ID .75" OD




**4x**

5/16" - 18 x 3"  
Security Torx Bolts



**1x**

Cylinder table base

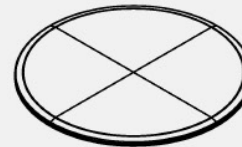


**1x**

42" Round Table Top

# Round Base Table Installation


**CORTECH**

1.

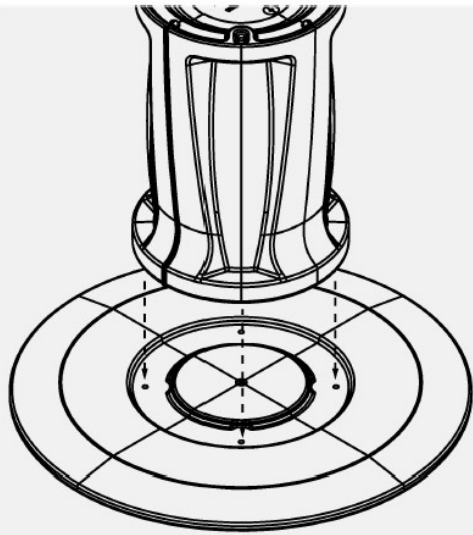


Place table top face down on the floor. Align the table base to the center of the table top. Check fitment and make any necessary adjustments.

2.

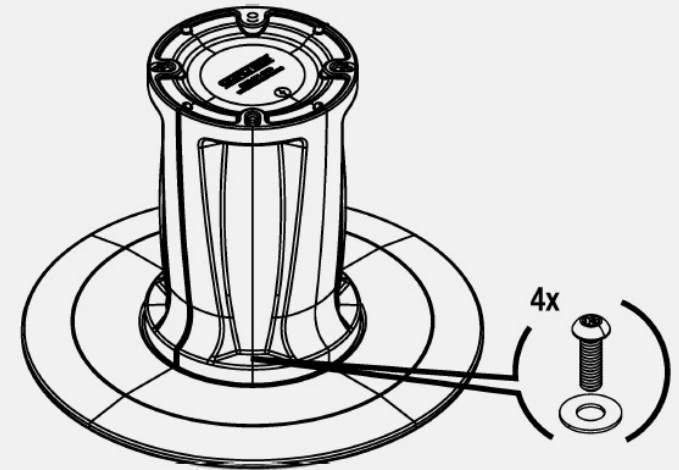


Insert and tighten each table top screw and washer 3-5 turns past finger tight. Loctite Encouraged.

3.

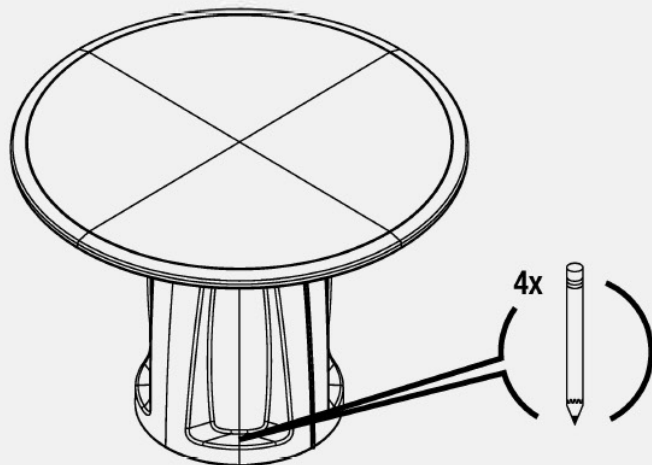

Turn over table and position table in desired location. Using a pen or pencil, mark the base mounting location onto the floor.

4.

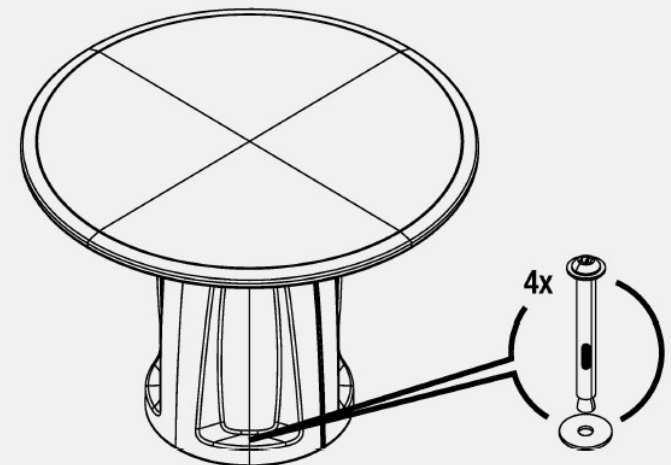

Drill holes in the locations where you marked the center of the floor mount hole. Hole depth should be 2.0" deep MINIMUM. Install concrete anchor and washer. Bolt the table to floor.