


Round Base Table Ballast Installation

CORTECH

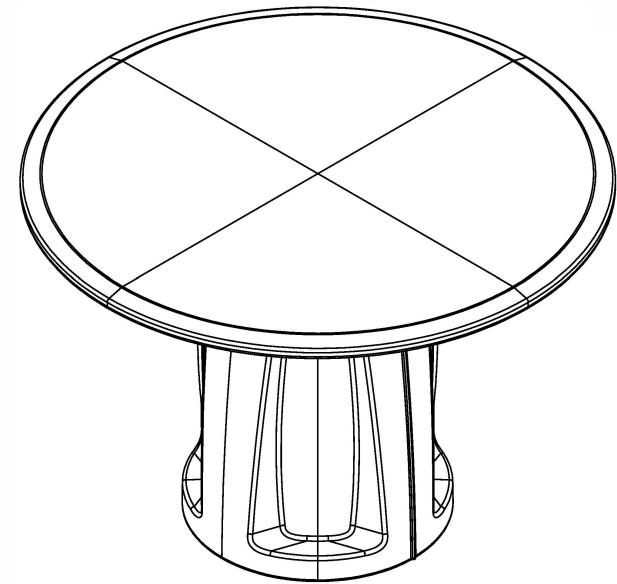

You will need:

Not Included:



1x

Screwdriver
With Tamper Resistant Torx Bit


Weighted Ballasts

Included:



1x

Cylinder table base



4x

5/16" Washer
.344" ID .75" OD




1x

Ballast Port Door



4x

5/16" - 18 x 3"
Security Torx Bolts

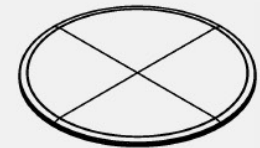

1x

42" Round Table Top




4x

Ballast Port Door Screws

Round Base Table Ballast Installation


CORTECH

1.

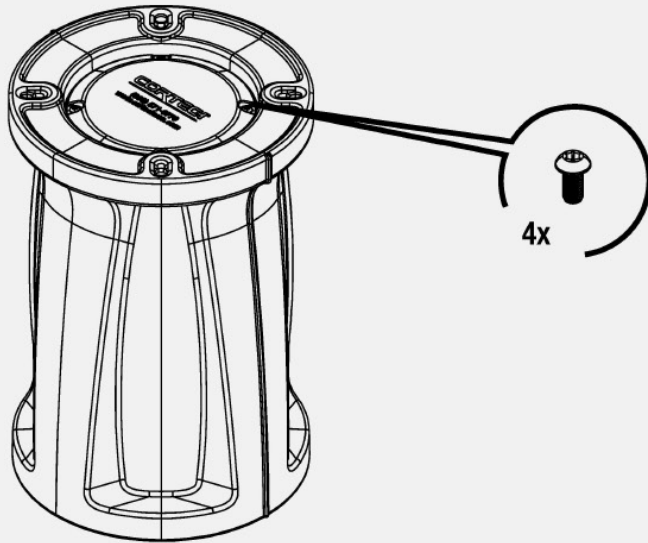


Position table in desired location. Remove the four panel screws using T27 Tone Bit Screwdriver.

2.

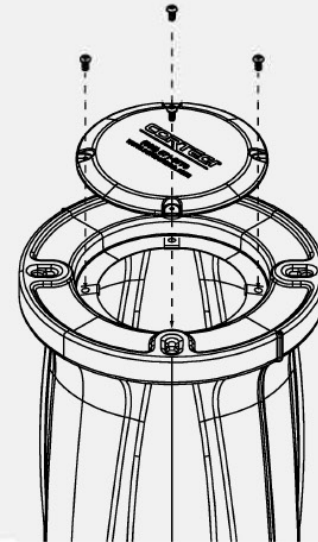


Add weighted ballasts into cavity and replace ballast door and panel screws. Tighten panel screws 3-5 turns past finger tight.

3.

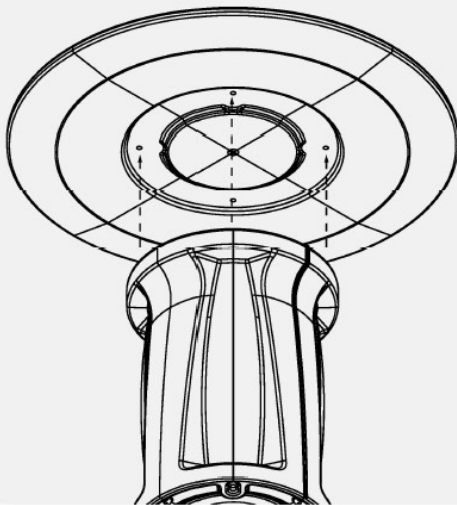

Align the table base to the center of the table top. Check fitment and make any necessary adjustments.

4.

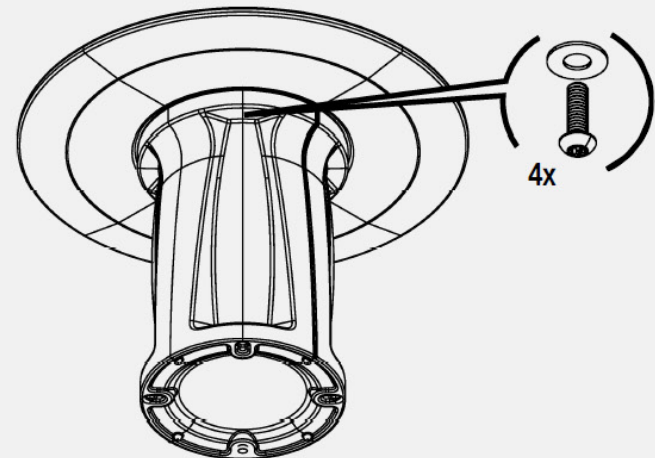

Insert and tighten each table top screw and washer 3-5 turns past finger tight.