


Summit Accent Chair Plate Installation Instructions

CORTECH

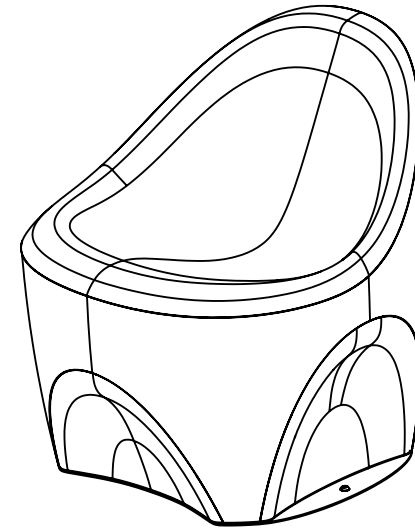


You will need:

Not Included:



1x
Screwdriver
With Tamper Resistant T27
and T40 Torx Bit

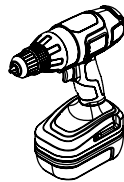

1x
Drill With 3/8"
Masonry Bit and 3/8"
Drill Bit




1x
Pencil
For Marking




1x
1/2" Socket Wrench

Included:

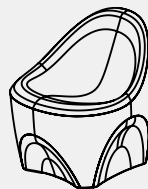

1x
Accent Chair

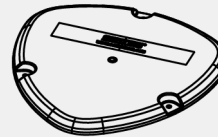

1x
Ballast Port Door



1x
Accent Chair Table Plate



2x
3/8" - 2-1/2" Sleeve Anchors
- Torx Tamper-Resistant
Drive Type 45TXH



4x
5/16"-18 - 1-1/4"
Tamper-Resistant Torx Flat Head
Screws




4x
5/16"-18
18-8 Stainless Steel
Nylon-Insert Flange Nut




3x
Ballast Port Door Screws

Summit Accent Chair - Plate Instructions


CORTECH

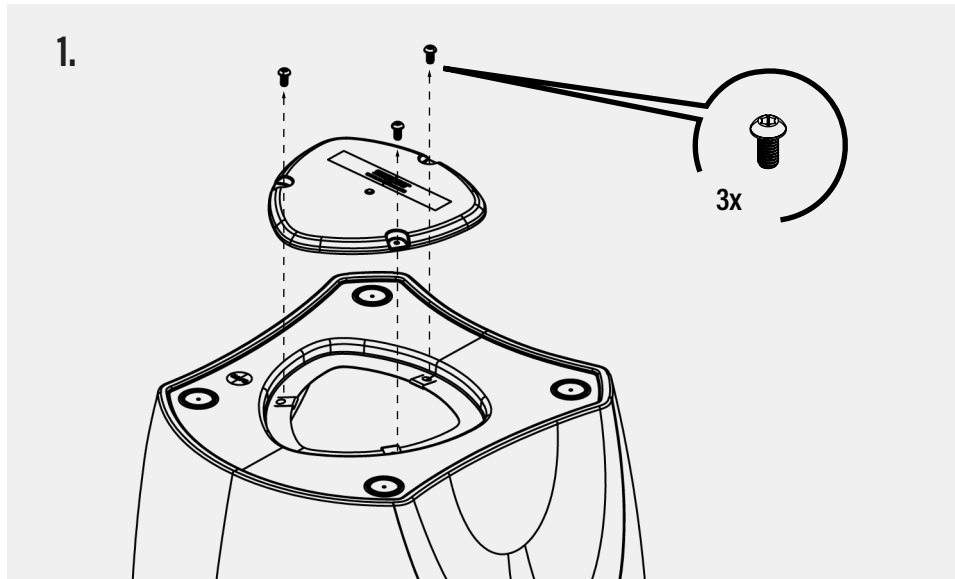


Flip product over. Using T27 Torx Bit, take Ballast door off.

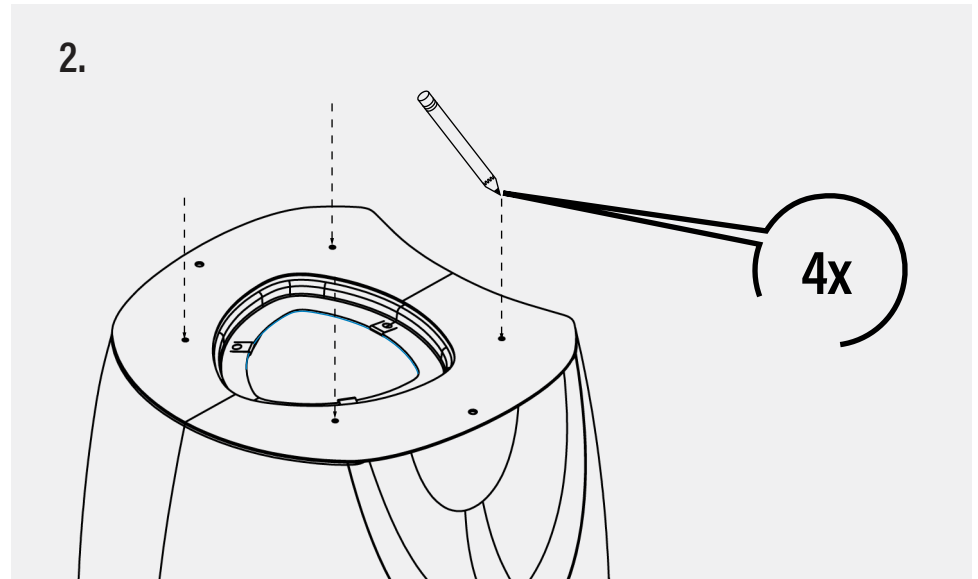

Line up Plate. Find 4 Countersunk holes and mark drill points.

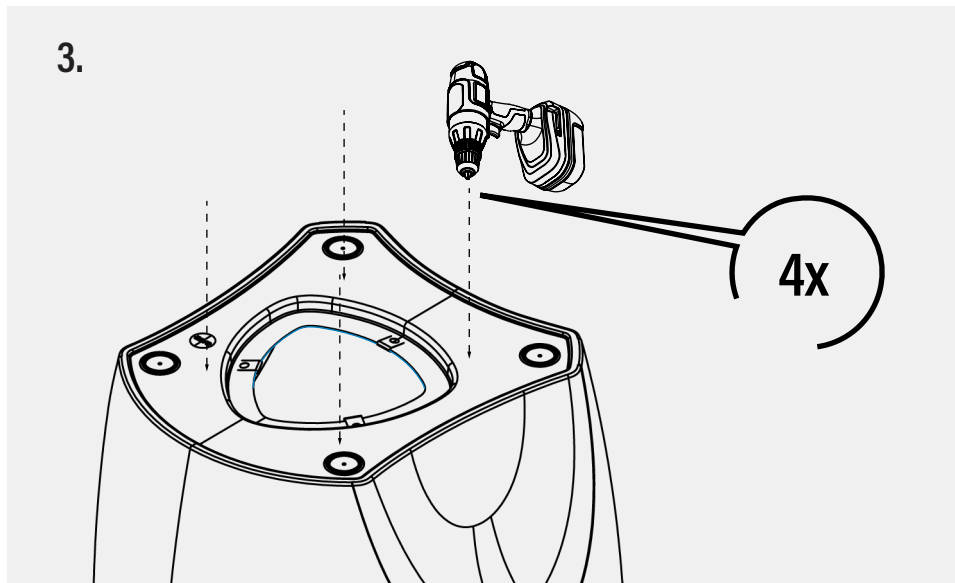

Remove Plate. Using 3/8" Drill bit, drill all 4 drill points.

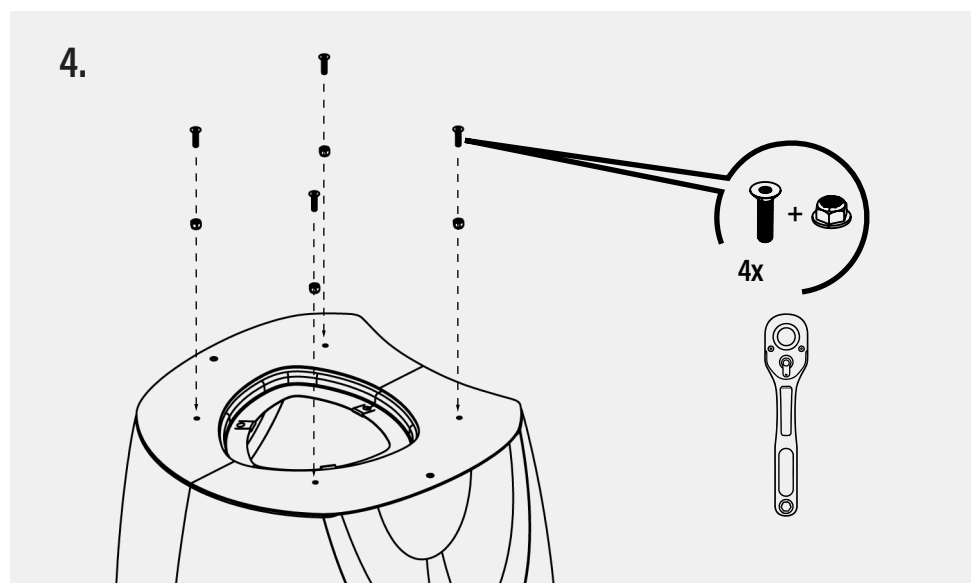


Replace plate. Feed bolts through the countersunk holes and tighten with nylon lock nuts.

Summit Accent Chair - Plate Instructions


CORTECH

5.

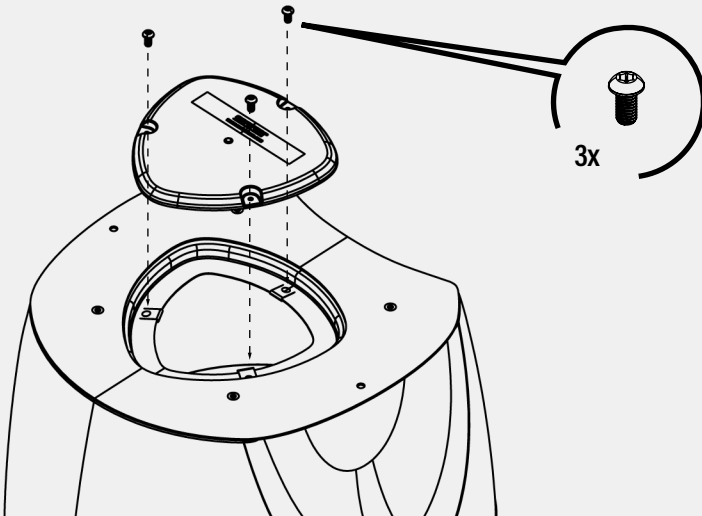


Replace Ballast door.

6.

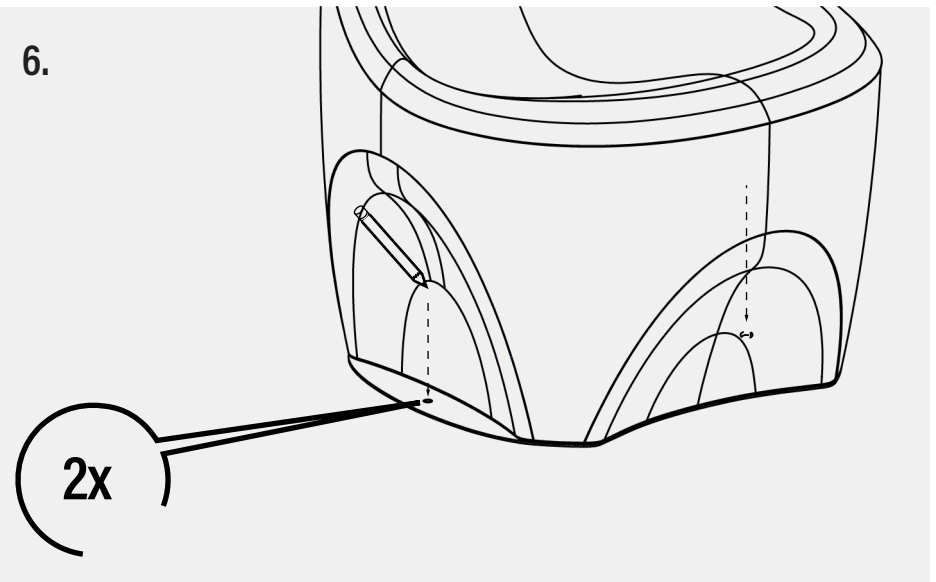


Put product in place. Find 2 exposed holes and mark drill points.

7.

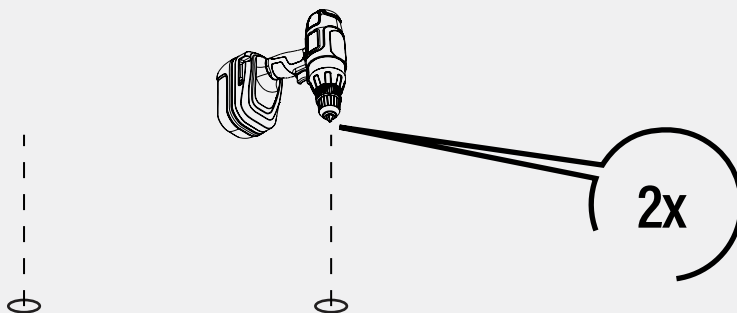

Remove product. Using 3/8" Masonry bit, drill all 2 holes.

8.

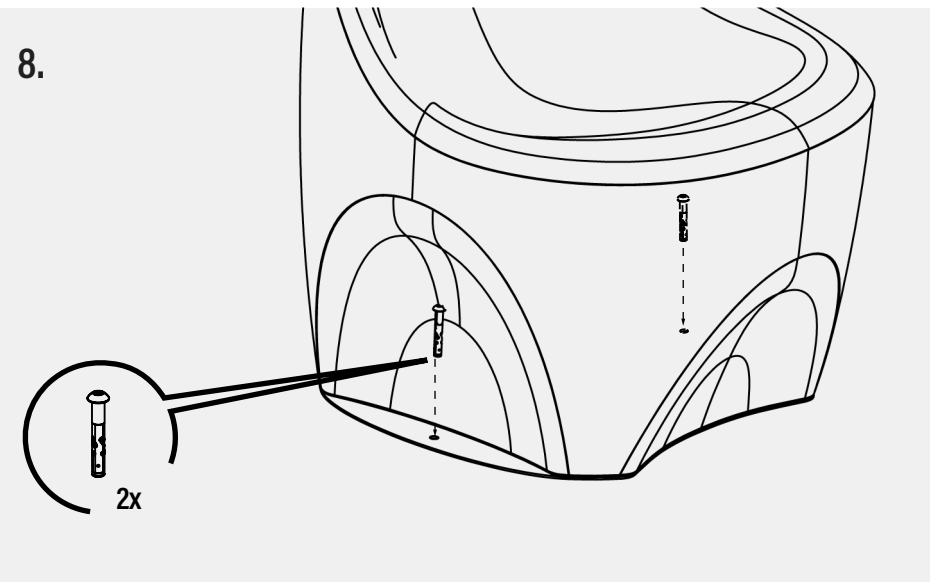

Replace Product. Install Anchors