


# Summit Chair Plate Installation Instructions

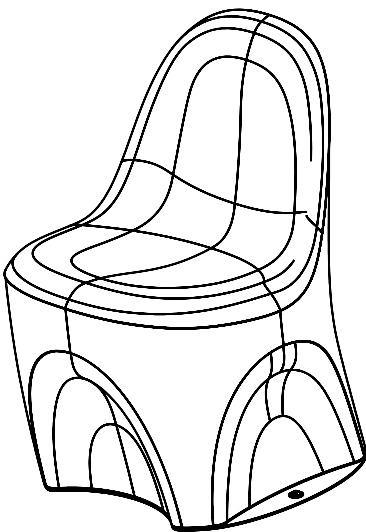


## You will need:

Not Included:



**1x**  
Screwdriver  
With Tamper Resistant T27  
and T40 Torx Bit

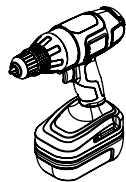

**1x**  
Drill  
With 3/8" Masonry Bit  
and 3/8" Drill Bit




**1x**  
Pencil  
For Marking




**1x**  
1/2" Socket Wrench

Included:

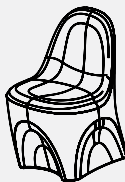

**1x**  
Dining Chair

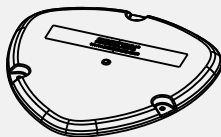

**1x**  
Ballast Port Door



**1x**  
Arm Chair Table Plate




**2x**  
3/8" - 2-1/2" Sleeve Anchors  
- Torx Tamper-Resistant  
Drive Type 45TXH



**4x**  
5/16"-18 - 1-1/4"  
Tamper-Resistant Torx Flat Head  
Screws




**4x**  
5/16"-18  
18-8 Stainless Steel  
Nylon-Insert Flange Nut




**3x**  
Ballast Port Door Screws

# Summit Chair - Plate Installation Instructions


**CORTECH**

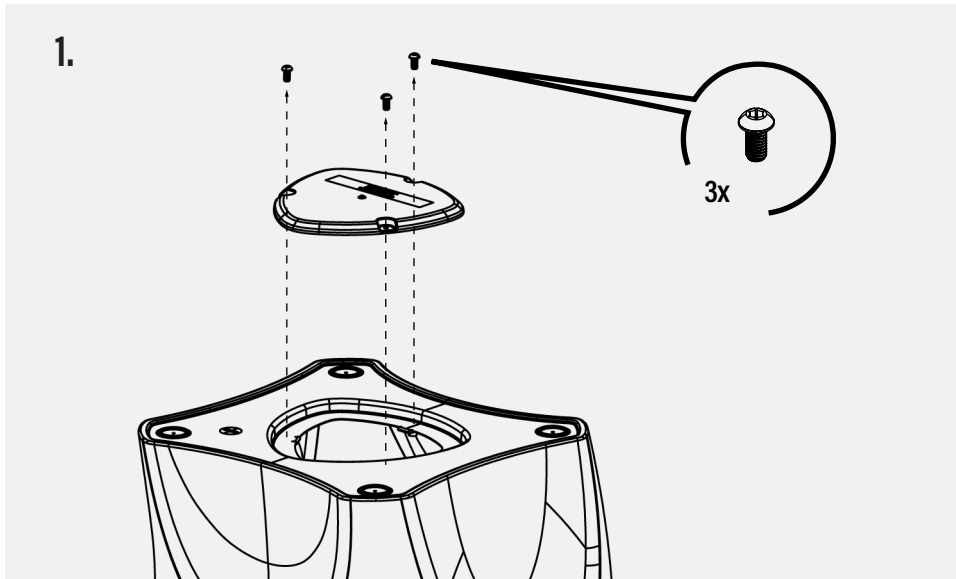


Flip product over. Using T27 Torx Bit, take Ballast door off.

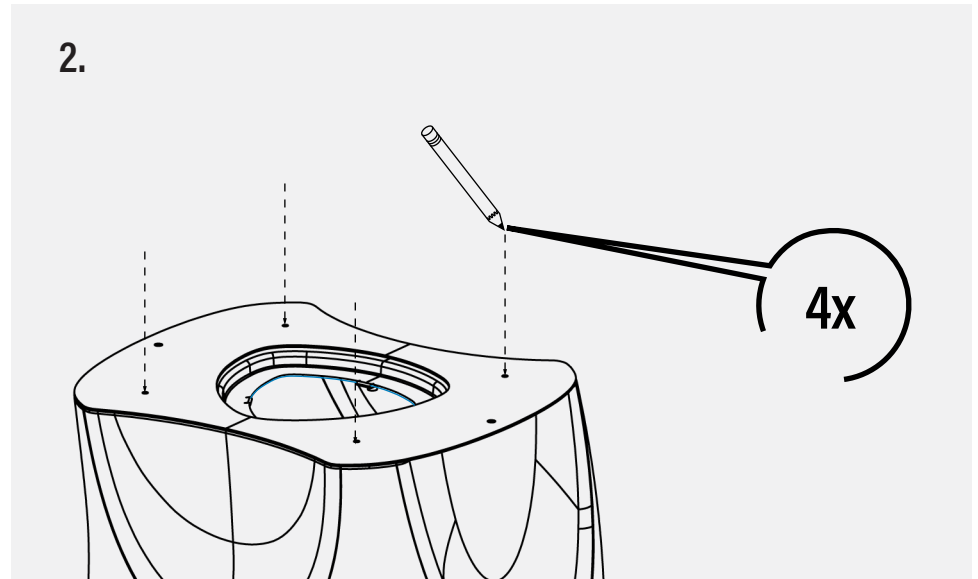

Line up Plate. Find 4 Countersunk holes and mark drill points.

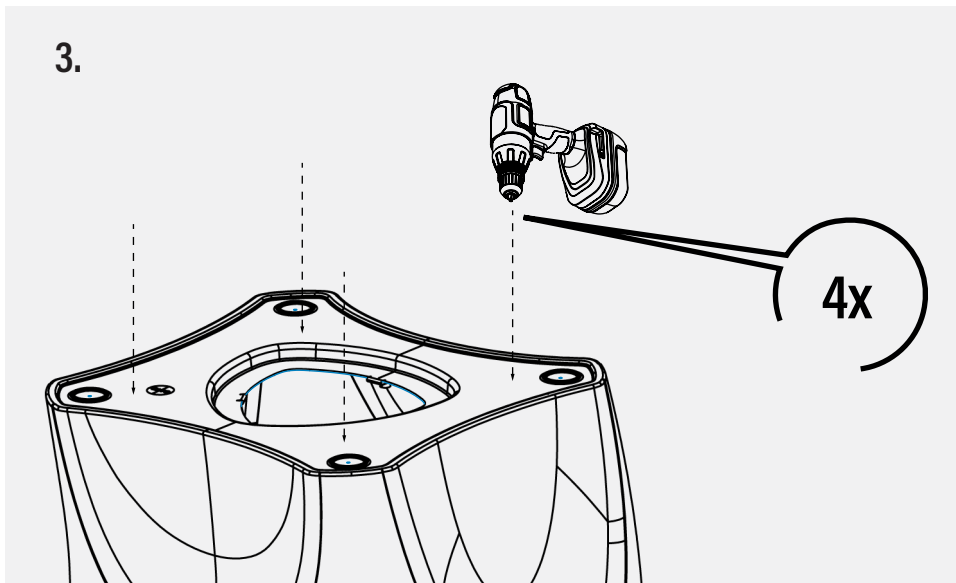


Remove Plate. Using 3/8" Drill bit, drill all 4 drill points.

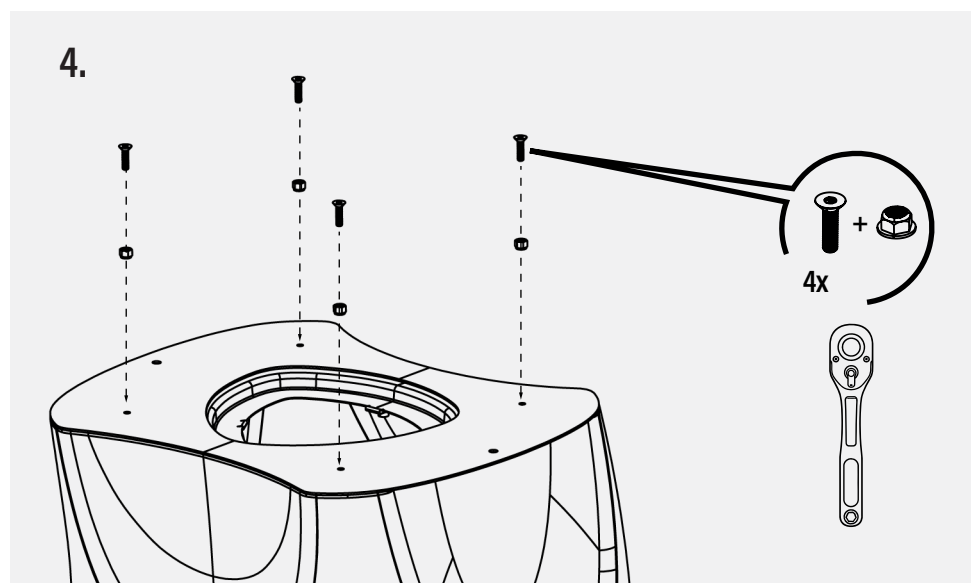


Replace plate. Feed bolts through the countersunk holes and tighten with nylon lock nuts.

# Summit Chair - Plate Installation Instructions


**CORTECH**

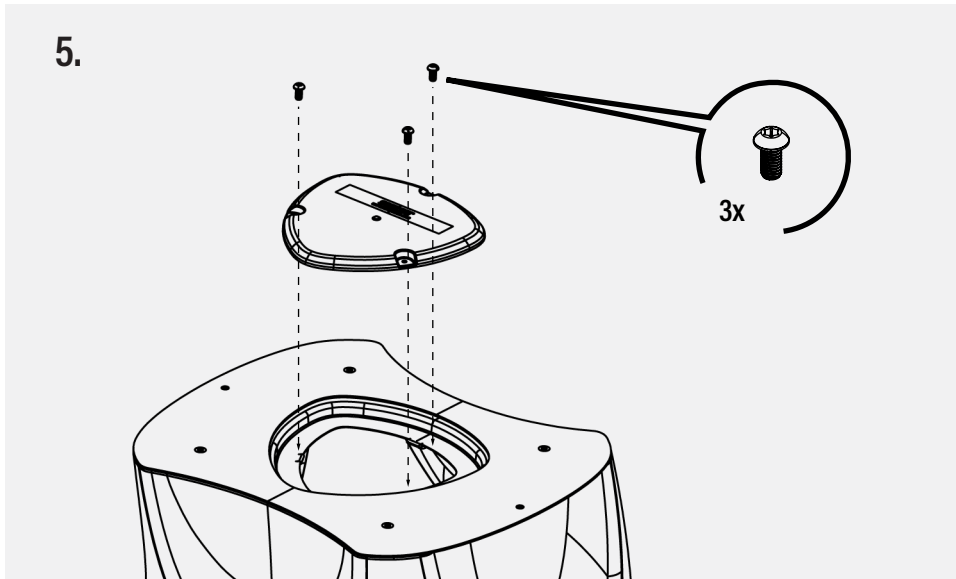


Replace Ballast door.

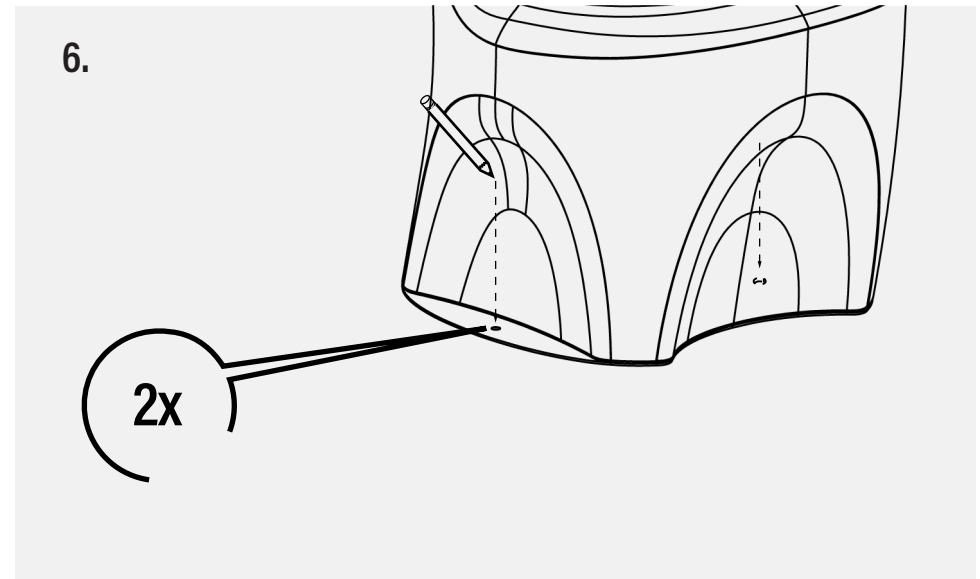

Put product in place. Find 2 exposed holes and mark drill points.

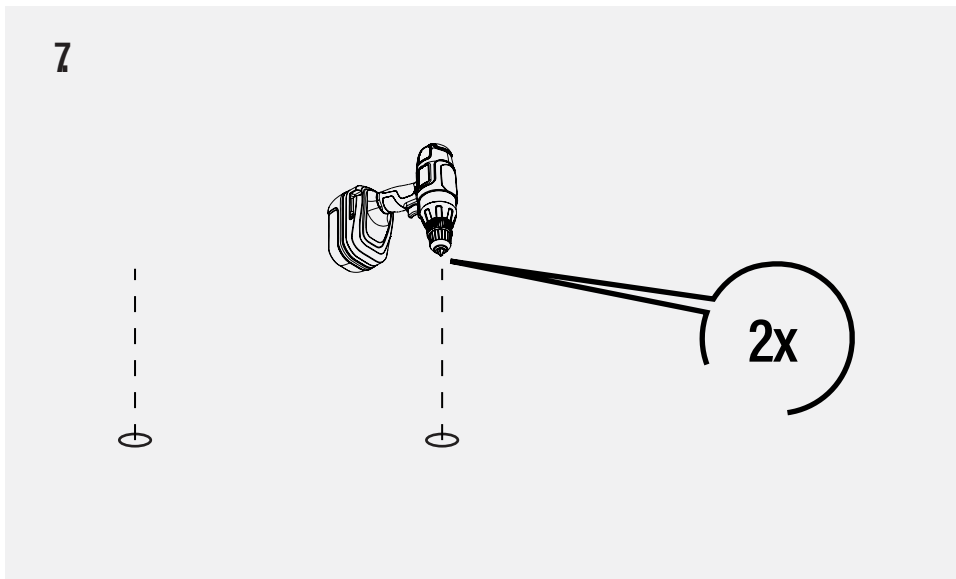

Remove product. Using 3/8" Masonry bit, drill all 2 holes.

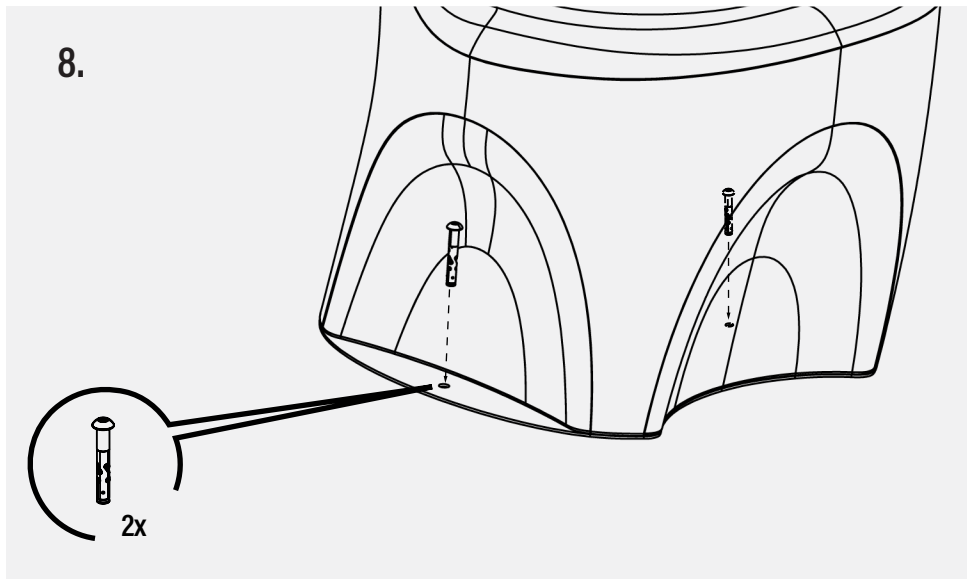

Replace Product. Install Anchors