


Summit Side Table Small Delta Top Assembly Instructions

CORTECH

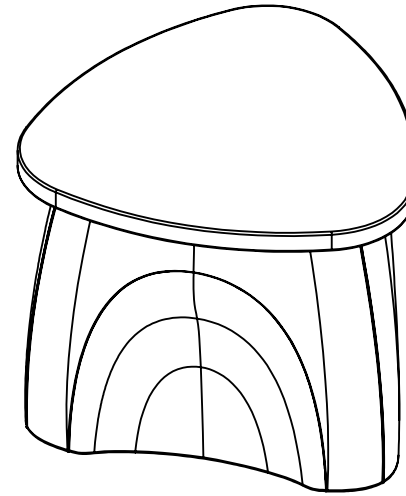

You will need:

Not Included:




1x

Screwdriver
With Tamper Resistant T27 and T40 Torx Bit


Weighted Ballasts

Included:

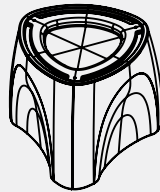


1x

Summit low table base

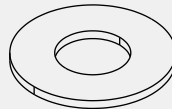

3x

Washer
3/8" ID 1.25" OD

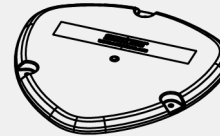


1x

Ballast Port Door



3x

5/16" - 18 x 1-1/2"
Security Torx Bolts

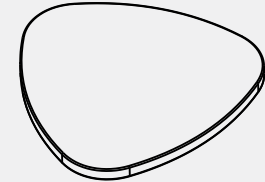

1x

21.65" Small Delta Table Top




3x

Ballast Port Door Screws

Summit Side Table Small Delta Top - Assembly Instructions


CORTECH

1.

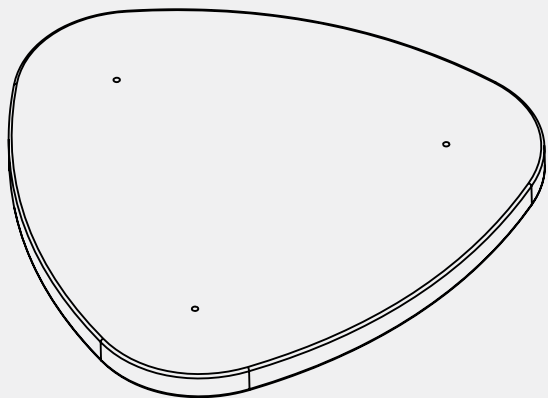


Place Tabletop on ground with inserts facing up

2.

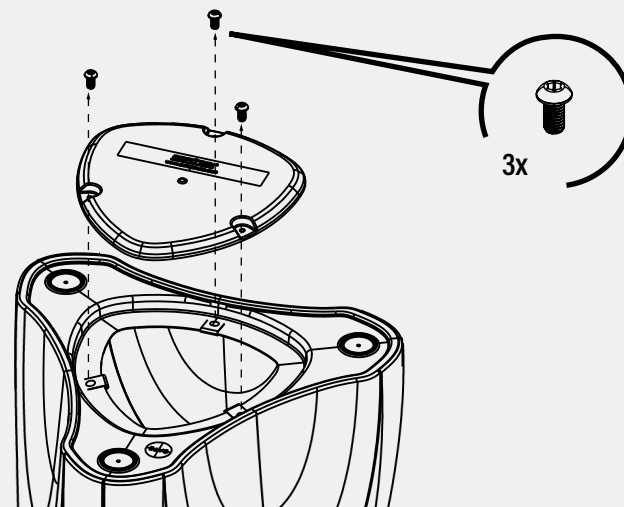


Using T27 Torx Bit, remove ballast door.

3.

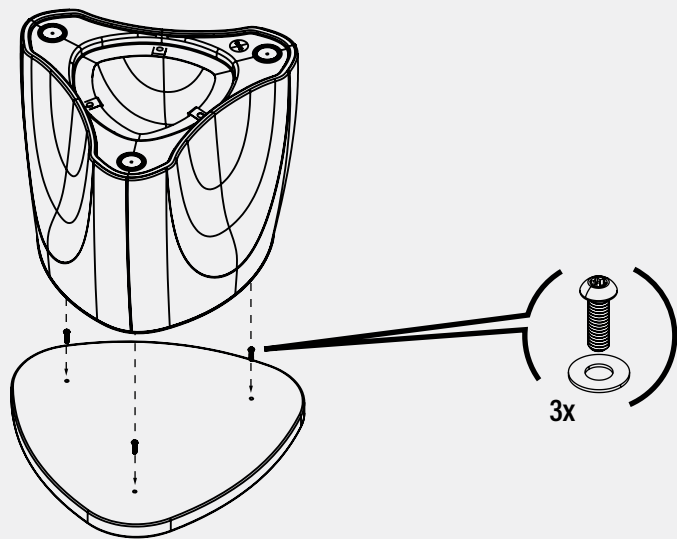

Place base on tabletop and match up bolt holes with inserts. Using T40 Torx bit with provided hardware, attach bolt and washer to tabletop.

4.

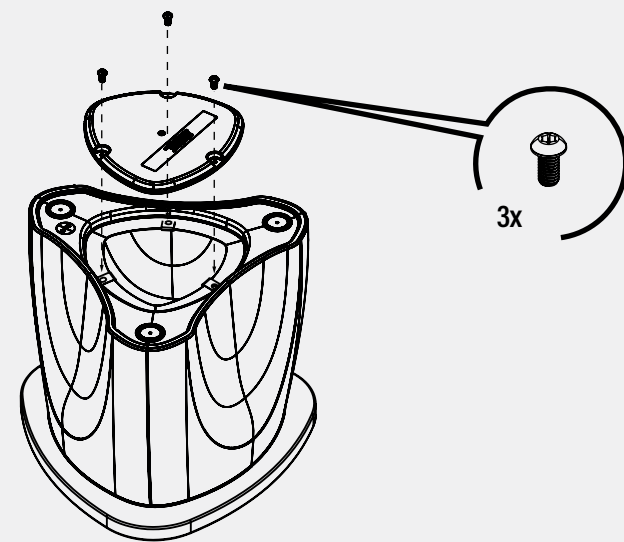

Replace ballast door.