


Summit Stool/Side Table Plate Installation Instructions

CORTECH

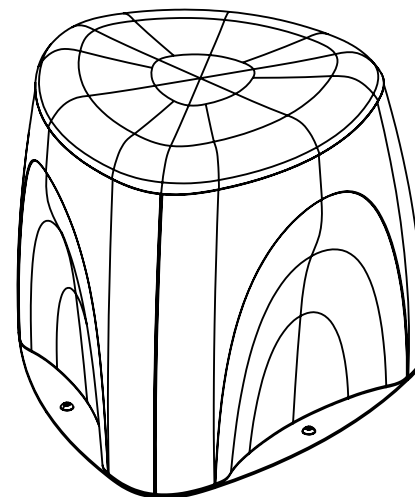


You will need:

Not Included:



1x
Screwdriver
With Tamper Resistant T27
and T40 Torx Bit

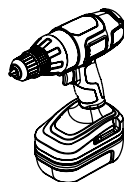

1x
Drill
With 3/8" Masonry Bit
and 3/8" Drill Bit




1x
Pencil
For Marking




1x
1/2" Socket Wrench


Included:

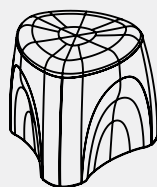

1x
Summit low stool

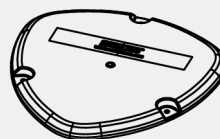

1x
Ballast Port Door

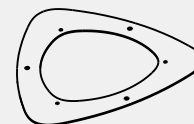

1x
Summit Low Stool/Side
Table Plate



3x
3/8" - 2-1/2"
Sleeve Anchors - Torx
Tamper-Resistant Drive Type
45TXH



3x
5/16"-18 - 1-1/4"
Tamper-Resistant Torx Flat Head
Screws



3x
5/16"-18
18-8 Stainless Steel
Nylon-Insert Flange Nut




3x
Ballast Port Door Screws

Summit Stool/Side Table - Plate Instructions


CORTECH

1.

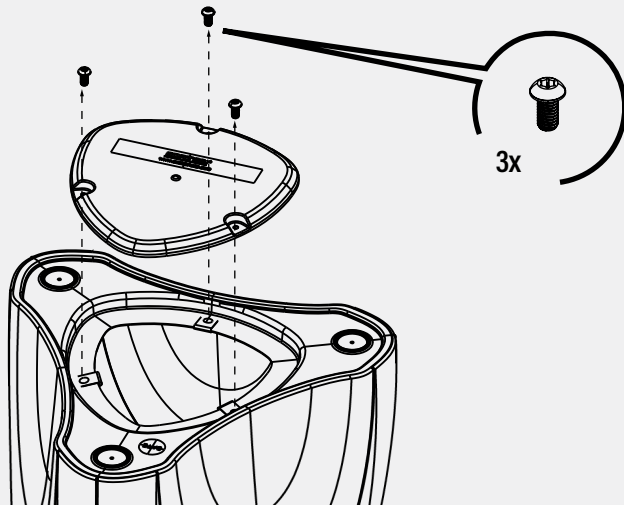


Flip product over. Using T27 Torx Bit, take Ballast door off.

2.

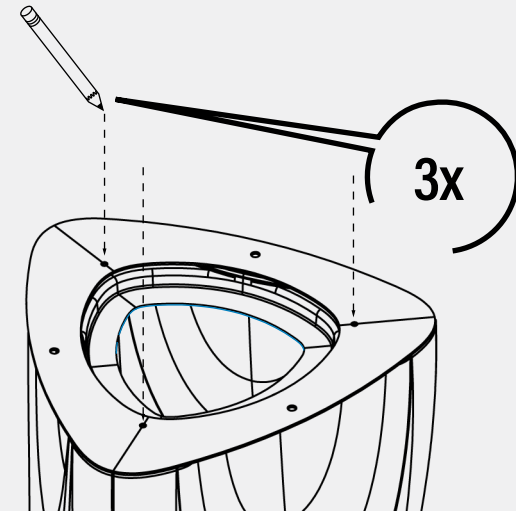


Line up Plate. Find 3 Countersunk holes and mark drill points.

3.

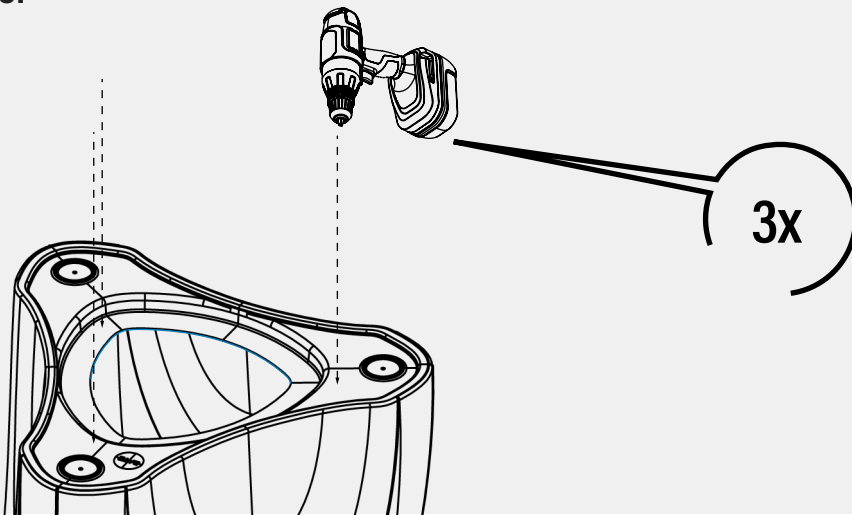

Remove Plate. Using 3/8" Drill bit, drill all 3 drill points.

4.

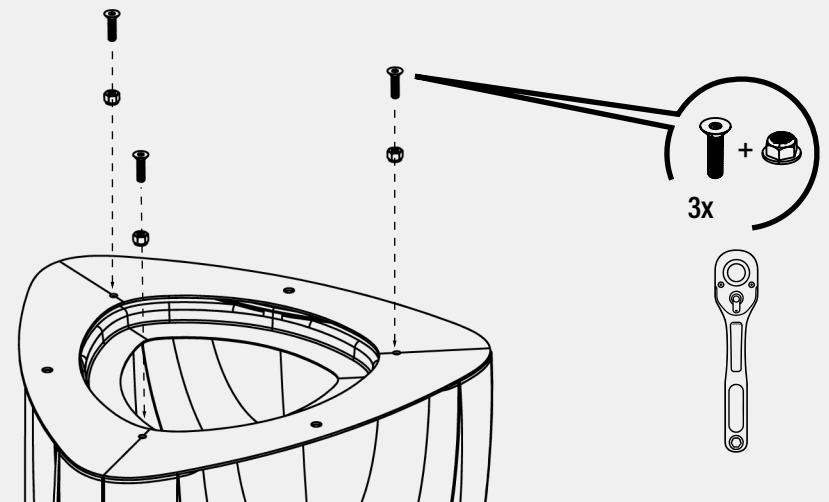


Replace plate. Feed bolts through the countersunk holes and tighten with nylon lock nuts.

Summit Stool/Side Table - Plate Instructions


CORTECH

5.

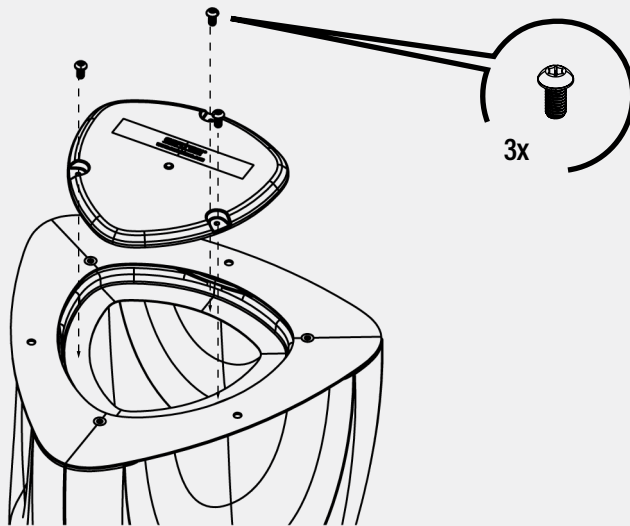


Replace Ballast door.

6.

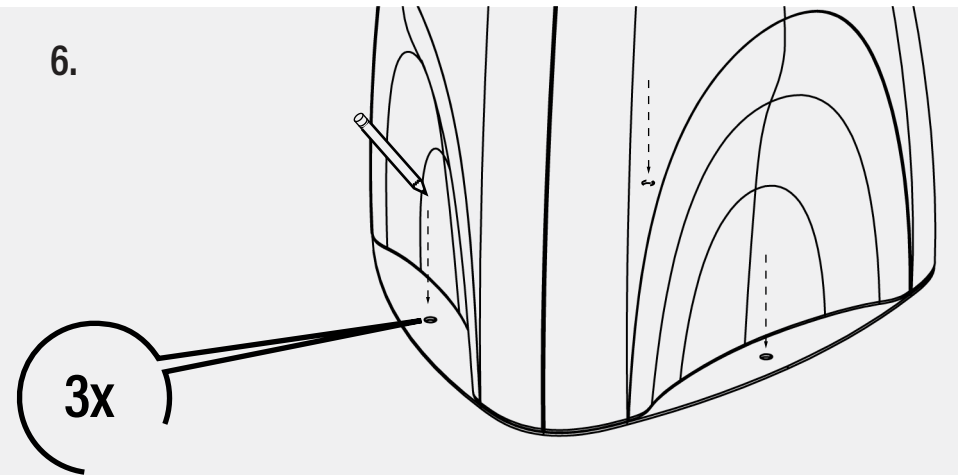


Put product in place. Find 3 exposed holes and mark drill points.

7.

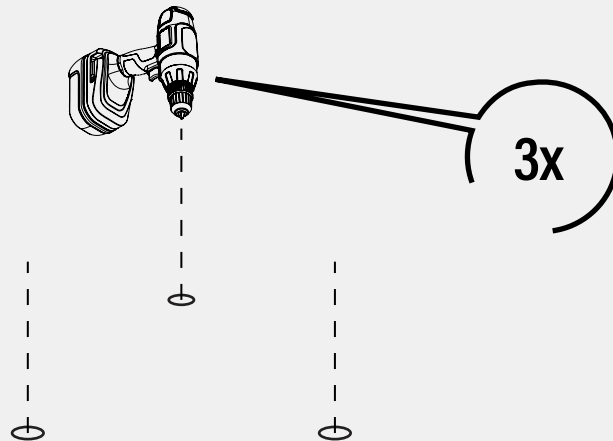

Remove product. Using 3/8" Masonry bit, drill all 3 holes.

8.

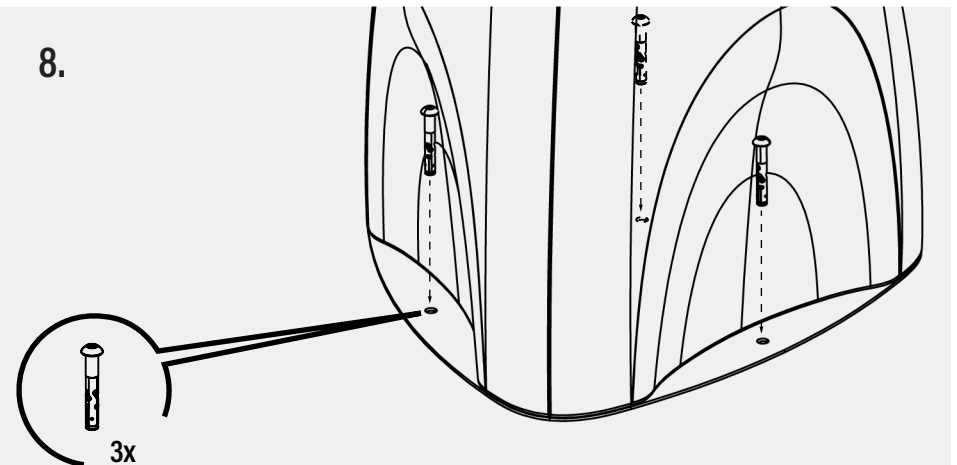

Replace Product. Install Anchors