

EVERLAST CLIMBING INDUSTRIES, INC.

INSTALLATION INSTRUCTIONS: 8' STANDARD PANEL™, MAGNA® PANEL, RELIEF-FEATURE PANEL™, DRY ERASE PANEL™, AND PLAYGROUND PANEL™



Materials Included:

Panels
Sleeve Anchors

Tools Needed:

Level
Wood Shims
1/2" Hammer Drill Bit

Drill
Socket Wrench
Wood Block

INSTALLATION INSTRUCTIONS:

(Please read all instructions thoroughly before starting to install)

1. Set the first panel on a block that is taller than the existing baseboard. Staying above the baseboard allows for future servicing and maintenance of your floor.

2. Place a 4' level on top of the first panel, making sure the edge is clear of debris and paint. Shim the panel so that it is perfectly level. (You can double-check this by using the level to plumb the side of the panel as well, but the top of the panel is a more trustworthy surface.) It is very important that the first panel be exactly level, since it will affect the remainder of the wall.

3. Hold the panel firmly in place and using a 1/2" hammer drill bit, drill through the two middle mounting holes.


4. Insert two of the 1/2" sleeve anchors provided. Tighten them down using a socket wrench or fixed wrench. Tighten them until snug - do not overtighten. If sleeve anchor starts to spin, pull out on the bolt head to "set" the cone in the sleeve.

5. Drill holes in the rest of the mounting holes. Insert sleeve anchors in the remaining holes and tighten.


6. Repeat steps to install the remainder of the panels to complete your climbing wall.




Sleeve
Anchor

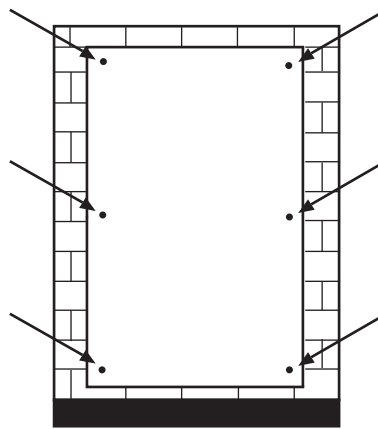


Mounting Holes

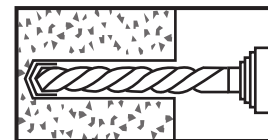

Step #1

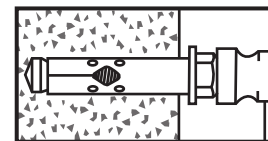

Step #2

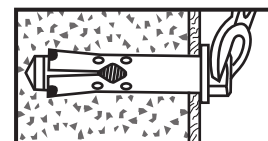

Step #3



WARNING

THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL IS ESSENTIAL AND IS YOUR RESPONSIBILITY. PLEASE REFER TO THE SAFETY, CARE AND MAINTENANCE INSTRUCTIONS.