


541-616 Basketball Backstop Aluminum Backboard

Page 1
Rev. 08/12/08

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents.

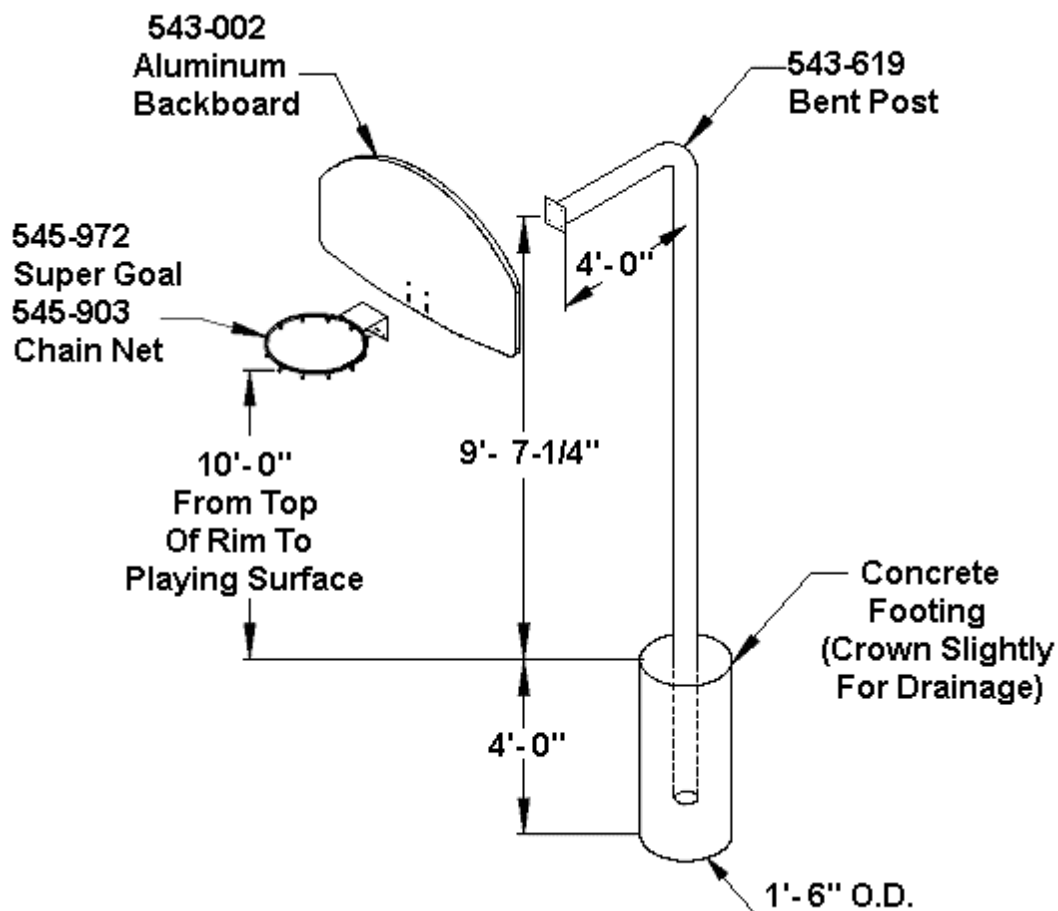

PACKING LIST

1	CTN	1	Hardware Bag
		1	545-972 Super Goal
		1	545-903 Chain Net
1	CTN	1	543-002 Aluminum Backboard
1	PIPE	1	543-619 Bent Post

HARDWARE BAG

4	116-625	3/8" x 1 1/2" Hex Tap Bolt
8	316-601	3/8" Flat Washer
4	236-604	3/8" Round 'T' Nut
4	216-601	3/8" Hex Nut

2 CTN

1 PIPE

3 TOTAL PCS

215 # Weight

Class 70

541-616 Basketball Backstop Aluminum Backboard

Page 2
Rev. 08/12/08

ASSEMBLY AND INSTALLATION:

NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points. **DO NOT** tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Locate and dig footing hole for 543-619 Bent Post

NOTE: see illustration on page 1 for size and depth of footing hole

STEP #2: Place long end of 543-619 bent post into footing hole.

NOTE: Brace 543-619 Bent Post in footing hole so that the underside of the extension is 9' - 7 ¼" from playing surface. Plumb and level.

STEP #3: Mix and pour concrete into footing hole using:

12 - 80 lb. Bags of Pre-Mix cement.

NOTE: Fill footing hole to the top with concrete and crown top for drainage. Allow to harden for 48 hours **BEFORE** attaching backboard, goal and net.

STEP #4: Attach 543-002 Aluminum Backboard to 543-619 Bent Post using:

4 - 3/8" x 1 1/2" Hex Tap Bolts

4 - 3/8" Flat Washers

4 - 3/8" Round 'T' nut

NOTE: Insert bolts with washer attached from bent post side into T-nut with threaded end inserted into backboard openings so that bolt ends extend beyond backboard. Level backboard on bent post.

STEP #5: Attach Goal to Backboard using:

4 - 3/8" Hex nuts

4 - 3/8" Flat Washers

NOTE: Tighten goal to backboard to post by holding front hex nut and tightening on bolt end. This pulls the threaded round 'T' nut tight to backboard.

NOTES: Do NOT over tighten bolts.


The official height of a Goal & Net is 10 feet from top of rim to top of playing surface.

541-616M Basketball Backstop Aluminum Fan Backboard and NYLON Net

Page 1
Rev. 05/12/2008

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents.

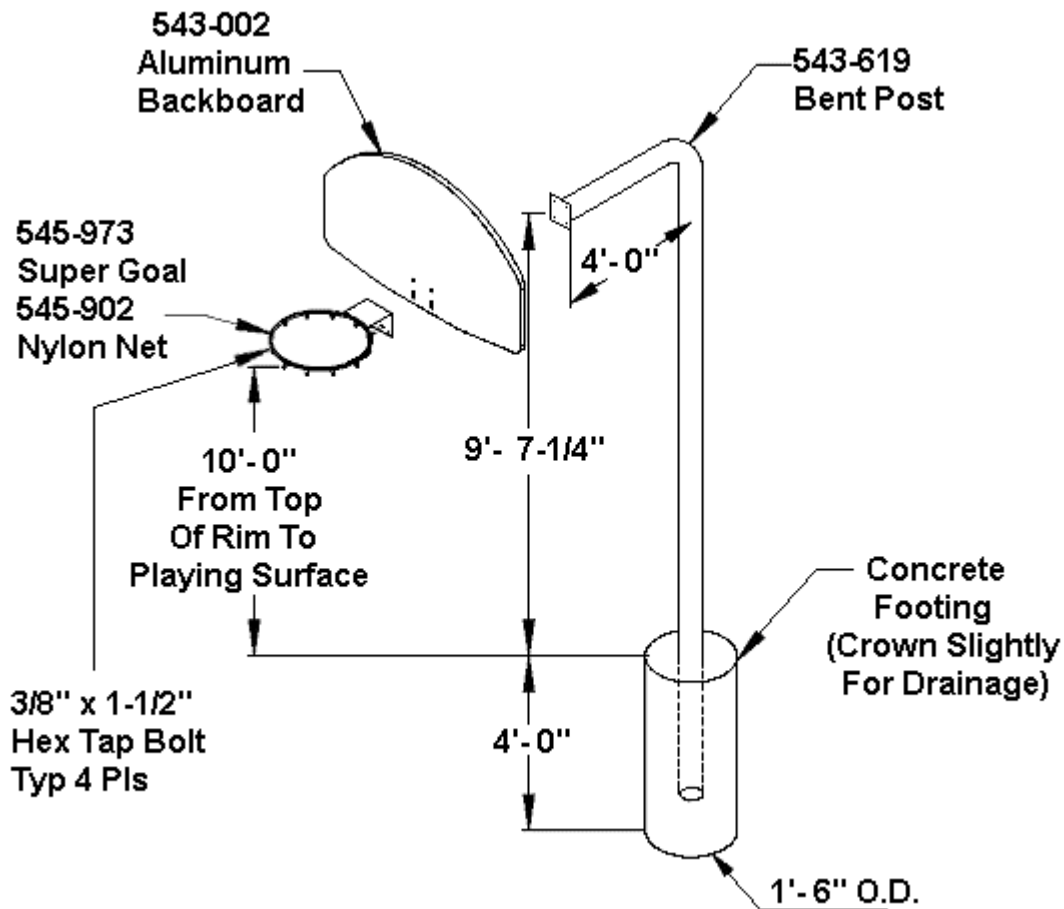

PACKING LIST

1	CTN	1	Hardware Bag
		1	545-973 Super Goal
		1	545-902 Nylon Net
1	CTN	1	543-002 Aluminum Backboard
1	PIPE	1	543-619 Bent Post

HARDWARE BAG

4	116-625	3/8" x 1 1/2" Hex Tap Bolt
8	316-601	3/8" Flat Washer
4	236-604	3/8" Round 'T' Nut
4	216-601	3/8" Hex Nut

2 CTN

1 PIPE

3 TOTAL PCS

215 # Weight

Class 70

541-616M Basketball Backstop
Aluminum Fan Backboard and NYLON Net

Page 2
Rev. 05/12/2008

ASSEMBLY AND INSTALLATION:

NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points. **DO NOT** tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Locate and dig footing hole for 543-619 Bent Post

NOTE: see illustration on page 1 for size and depth of footing hole

STEP #2: Place long end of 543-619 bent post into footing hole.

NOTE: Brace 543-619 Bent Post in footing hole so that the underside of the extension is 9' - 7 1/4" from playing surface. Plumb and level.

STEP #3: Mix and pour concrete into footing hole using:

12 - 80 lb. Bags of Pre-Mix cement.

NOTE: Fill footing hole to the top with concrete and crown top for drainage. Allow to harden for 48 hours **BEFORE** attaching backboard, goal and net.

STEP #4: Attach 543-002 Aluminum Backboard to 543-619 Bent Post using:

4 - 3/8" x 1 1/2" Hex Tap Bolts

4 - 3/8" Flat Washers

4 - 3/8" Round 'T' nut

NOTE: Insert bolts with washer attached from bent post side into T-nut with threaded end inserted into backboard openings so that bolt ends extend beyond backboard. Level backboard on bent post.

STEP #5: Attach Goal to Backboard using:

4 - 3/8" Hex nuts

4 - 3/8" Flat Washers

NOTE: Tighten goal to backboard to post by holding front hex nut and tightening on bolt end. This pulls the threaded round 'T' nut tight to backboard.

NOTES: Do NOT over tighten bolts.

The official height of a Goal & Net is 10 feet from top of rim to top of playing surface.

Maintenance: Check periodically for loose and/or broken parts. Replace immediately.