LW430

Library On Wheels



Assembly Guide LW430_2014_B

Check out our other products online at **www.copernicused.com**

For assistance, please contact us:


1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

WARNING


- This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- · To be used under direct supervision of an adult.

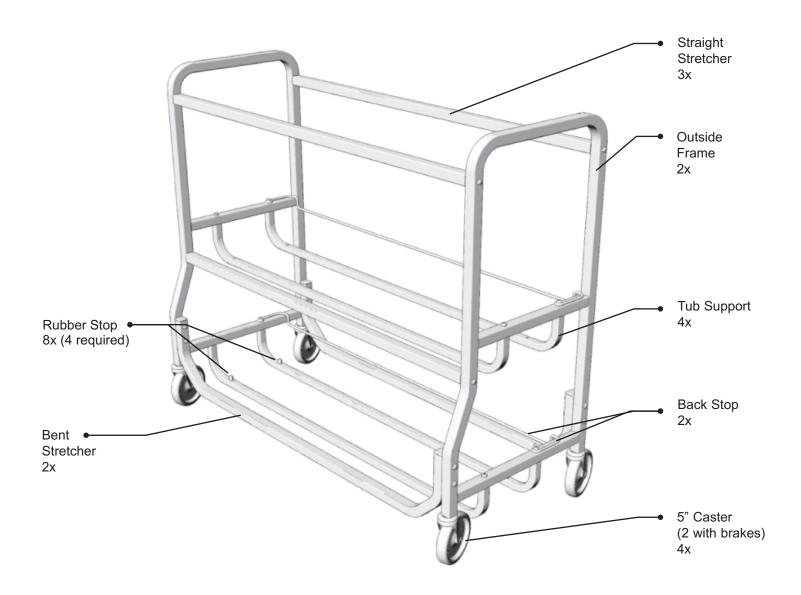

Library On Wheels - Parts

Before beginning, you should have:

Additional tools required:

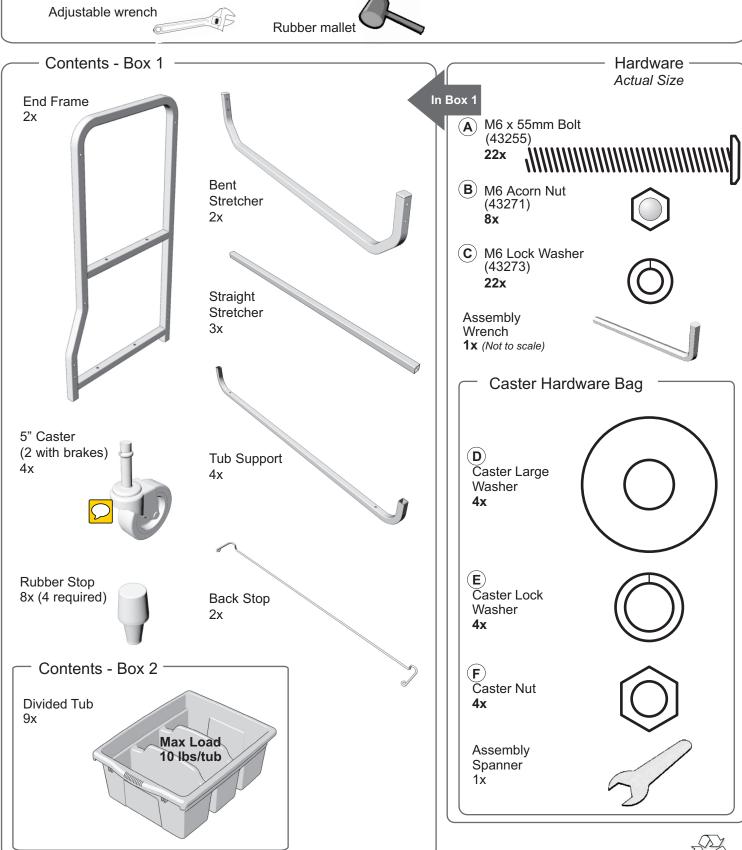

LW430

Tips for Assembly - Using this Manual



Watch for These Helpful Symbols

• This symbol denotes a 2 Person Task. For safety, please ensure that there are two people working on steps displaying this symbol



• Watch for this symbol throughout the Assembly Instructions. Wherever you see it, pay close attention. The symbol denotes a step needing extra attention to ensure it is done correctly.



• The Star symbol highlights an advisory note

Before You Begin



- Layout and identify all of the included parts
- The hardware has been packed by step for your convince
- Read the assembly instructions over once to familiarize yourself with them
- Please note that in its unassembled state, this product contains parts that can be a hazard to small children; it should be assembled by an adult.



As You Assemble the Unit

- Follow the steps in sequence
- Before beginning each step, find the part(s) that you need for that step
- Pay attention to the labeling on the parts, they are there to help direct you at certain stages
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Customer Service - FAQ's



For missing parts and other issues regarding your LW430:

Please call Copernicus Customer Service, where we will be happy to help. 1-800-267-8494. Monday - Friday 8:30am - 4:30 pm EST. OR

Email our Tech Support Service at vanessa@copernicused.com






Validate Your Warranty On-Line

To validate your warranty submit the ON-LINE form at www.copernicused.com


"The beautiful thing about learning is that no one can take it away from you." - B. B. King



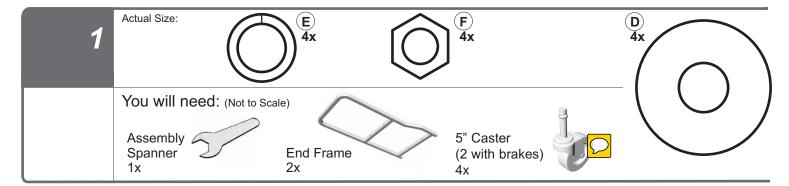

Attach Casters


- 1
- · Install nut on caster stem
- Using Spanner Wrench provided and your own Adjustable Wrench, tighten nut against the caster.

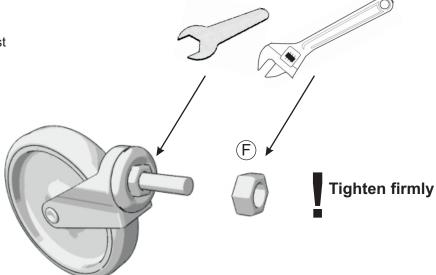

2

Note: it is recommended that casters with brakes be located both front or both rear. The rear location is preferred to prevent children from playing with the brakes.


- · Place lock washer onto caster stem
- · Follow with large flat washer
- Carefully thread the casters into the ends of the outside frames. Slowly tighten by the stem base only.
- Tighten firmly. Make sure lock washer is collapsed.
- You may need to use your adjustable wrench (Spanner Wrench) to fully tighten to frame.

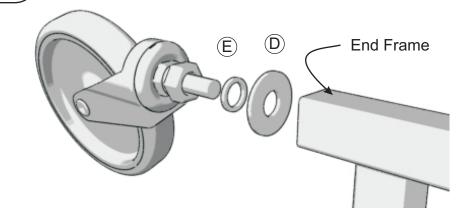

IMPORTANT: Routine Maintenance


- Verify regularly that casters are secure to the unit
- Re-tighten if needed with Wrench



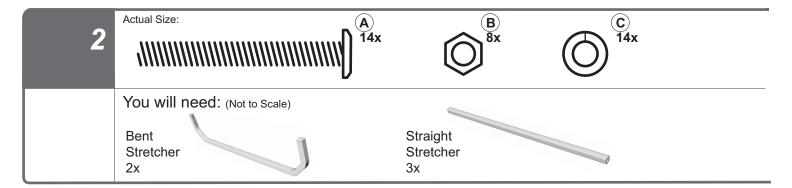


Attach Stretchers

★ DO NOT TIGHTEN ANY FASTENERS UNTIL PROMPTED! Hand tighten only

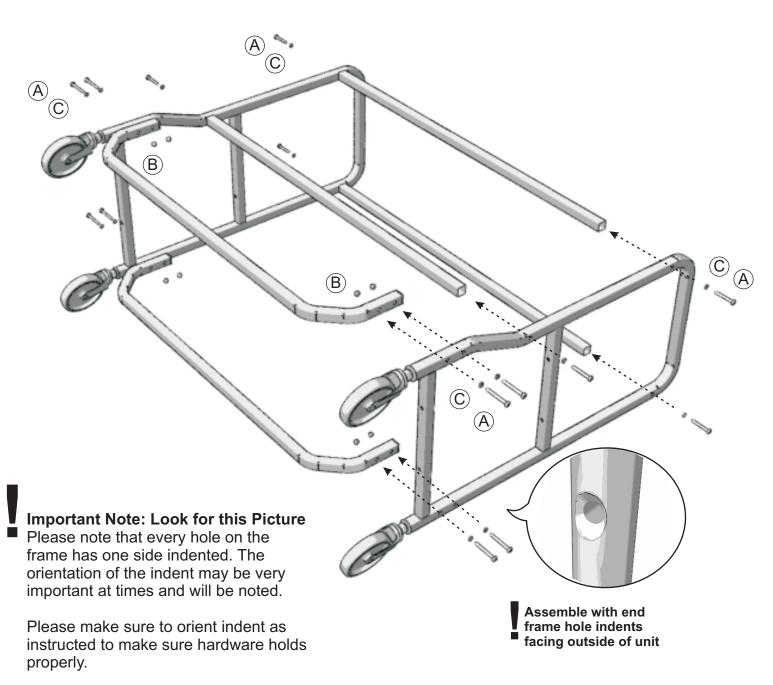



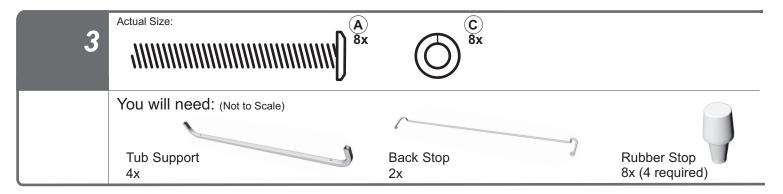

Attach Tub Supports and Back Stops

